



Proven Quality. Trusted Name.

# SUGGESTED PREVENTATIVE MAINTENANCE SCHEDULE

800.227.3572 · tescobus.com

| AREA OF CONCERN          | SCHEDULE    |              |              |              | PROCEDURE   |
|--------------------------|-------------|--------------|--------------|--------------|---|
|                          | WEEKLY      | 30 DAYS      | 120 DAYS     | YEARLY       |   |
| EXTERIOR BODY & ROOF     | ✓           |              |              |              | Remove salt, tar, bugs, sap, bird droppings, road chemicals, etc as soon as possible to prevent staining and corrosion.   |
| EXTERIOR BODY & ROOF     |             | ✓            |              |              | Wash vehicle using a mild liquid detergent and lukewarm or cold water out of direct sunlight. Do not use strong chemical detergents. Do not use a pressure washer. All cleaning products should be promptly flushed from the surface with water and not allowed to dry on the finish. |
| EXTERIOR BODY & ROOF     |             | ✓            |              |              | Inspect for scratches or dings. If left untreated, exposed areas can rust or water can seep under paint and damage the finish.  |
| EXTERIOR BODY & ROOF     |             |              | ✓            |              | Wash with nonabrasive wax/polish. Use automotive wax for painted steel and marine grade polish for filon, ABS and fiberglass.   |
| SEALS & CAULK            |             |              | ✓            |              | Inspect and reseal as necessary.  |
| UNDERBODY                |             | ✓            |              |              | During the winter months or if the unit is exposed to a sea breeze do a complete underbody flush to remove salt and chemicals.  |
| TIRES                    |             | ✓            |              |              | Make sure the vehicle is moved regularly to avoid flat spots in tires.  |
| TIRES                    |             | ✓            |              |              | Check tire pressure and inflate to the recommended pressure. Label is located on driver's door jam.   |
| BATTERIES                |             | ✓            |              |              | Test Batteries  |
| DOORS, ENTRY & ACCESS    |             |              | ✓            |              | Check vinyl seals to ensure there are no cracked or damaged seals.  |
| DOORS, ENTRY & ACCESS    |             |              |              | ✓            | Lubricate door locks, hinges, pivot points and striker areas.   |
| WINDOWS                  |             |              |              | ✓            | Adjust and lubricate egress window latches.   |
| ELECTRICAL CONNECTIONS   |             |              |              | ✓            | Check all exterior electrical connections for corrosion.  |
| INTERIOR CHECK           |             | ✓            |              |              | Check the interior of the vehicle for any water intrusion.  |
| SEATING                  |             |              |              | ✓            | Lubricate all mechanisms, check seat belts for fraying.   |
| WHEELCHAIR LIFT          |             |              |              | ✓            | Inspect, adjust and lubricate wheelchair lift. Must be performed by a certified technician.   |
| REAR A/C                 |             |              |              | ✓            | Check filter and clean drains.  |
|                          | EVERY<br>5K | EVERY<br>15K | EVERY<br>30K | EVERY<br>60K |   |
| BODY                     | ✓           |              |              |              | Lubricate all movable parts including battery trays, rear door latch, wheel chair door latch, hood latch, drivers door latch and entry door pivots.   |
| CHASSIS                  | ✓           |              |              |              | Change oil, inspect and lubricate all necessary chassis components per manufacturer recommendations. Rotate tires.  |
| CHASSIS                  |             | ✓            |              |              | All service under "Every 5k Miles" above plus inspect exhaust system and cooling system.  |
| CHASSIS                  |             |              | ✓            |              | All service under "Every 5k Miles" and "Every 15k Miles" above plus replace wheel bearing grease and inspect wheel bearings, change transmission fluid.   |
| CHASSIS                  |             |              |              | ✓            | All service under "Every 5k Miles", "Every 15k Miles" and "Every 30k Miles" above plus replace spark plugs. See chassis manufacturer documentation for service after 100,000 miles.   |
| OEM CHASSIS & COMPONENTS | ✓           | ✓            | ✓            | ✓            | Follow any additional recommended maintenance programs supplied by the chassis manufacturer.  |

The information is just a summary and is not construed to be all inclusive. Please refer to the major component individual owners manuals (such as chassis, body, air conditioning, wheel chair lift, etc) for detailed maintenance instructions.